



Step 1
Fitting tools required.



Step 2
Accessories pack.




Step 3
Fix sticky pad (double sided).



Step 4
Stick blind on frame.



Step 5
Drill 2 x 2.5mm holes each side.

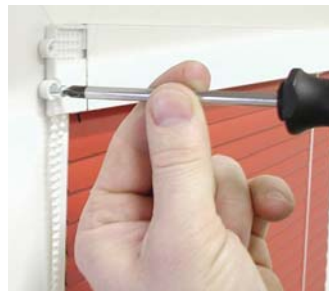

Step 6
Hand screw fixings.



Step 7
Mark drilling template.



Step 8
Drill 1 x 2.5mm hole each side.



Step 9
Push guide wire into hole, knot first. Push fixing plug into hole. This secures bottom of blind.




Step 10
Pull cord tight and lock in place with door - release. Cutt off excess guide wire, 100mm from end.



Step 11
Tuck excess guide wire behind the headrail. You should have enough to re-tension if required.



Step 12
Ensure that guide is fully tucked in behind headrail. The cover cap now clips on.

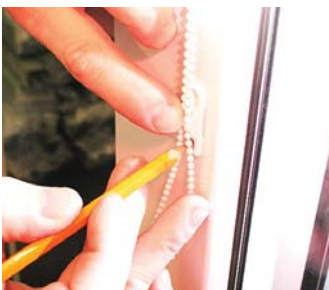

Step 13
Mark holes for mono-control.



Step 14
Drill 2 x 2.5mm holes. Do not on any account drill too close to the edge of the window bead.



Step 15
Hand screw small fixings. These fixings should be no longer than 20mm.



Step 16
Clip on cover to hide fixings.